

# PERFORMING A WEB SETUP WITHOUT A PHONE LINE

(This procedure is also good for turning on other computers to the same commissioned modems without having to run a web setup on them).

For owners of the DataStorm system, finding a phone line to perform a web setup is like asking a person to run 10 miles in tight shoes... I don't recommend it.

Good news! There is a way to avoid using a phone line AFTER the modems have been commissioned. (Sorry there is no way to perform a web setup without a phone line or Internet connection during the initial activation of the Direcway modems).


## PREPERATION PROCEEDURE:

Before you can perform a web setup without a phone line, a bit of prep work needs to be done first.


**WARNING – Uninstalling the Direcway Software before you follow these steps will force you to find a phone line to complete a Web Setup.**

1. Create a folder on your desktop called "Web Setup No Phone"
2. Copy this document (the one you are reading now) to this folder.
3. Double click on the "My Computer" icon on your desktop, then open up the "C:" drive, then the "Program Files" folder, then the "Direcway" folder, then the "BIN" folder.
4. Locate and **COPY** the below three files in the BIN folder to the folder you just created on your desktop named "No Phone Web Setup".
  - a. authrsp.acm
  - b. eemkrsp.acm
  - c. paramrsp.acm(to copy a file quickly, simply press down the "ctrl" key at the same time that you drag and drop the file to the new folder).
5. Close all open windows.
6. Click on the "Start button"
7. Choose "Programs"


8. You will see DirecWay folder... Double click on this folder to open it.

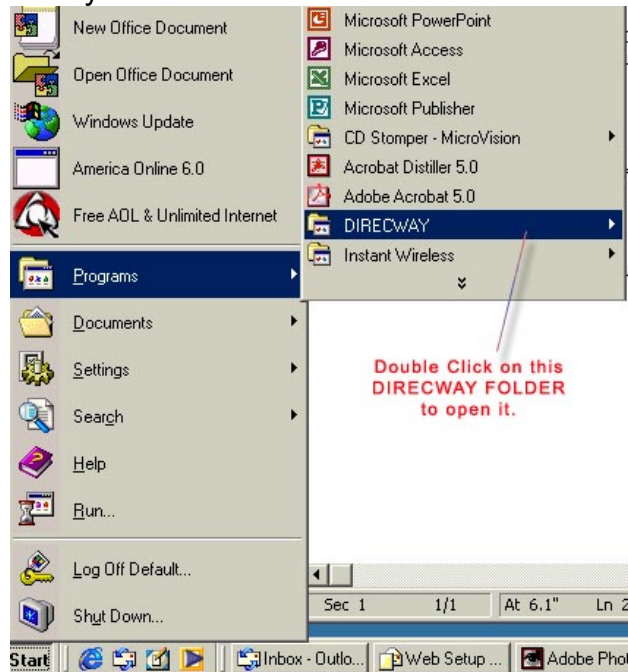

9. **RIGHT** click on the "WebSetup" shortcut icon and choose "Make Shortcut"
10. Rename the new shortcut icon to "Web Setup No Phone.exe"
11. **RIGHT** click on "Web Setup No Phone.exe" and choose "Properties"
12. Add the line /config to the end of the "target" line so that the line reads:  
"C:\Program Files\DIRECWAY\BIN\websetup.exe" /config

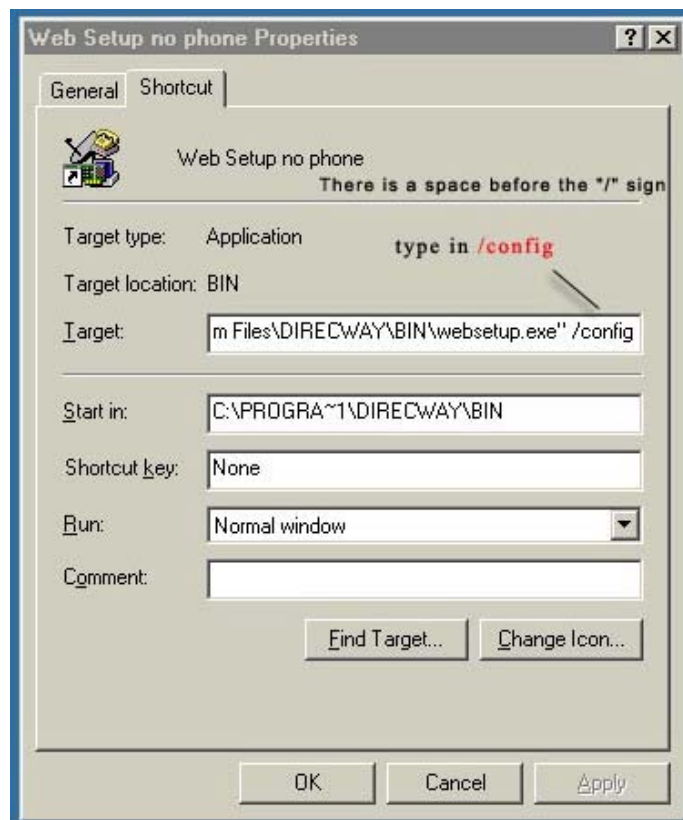

13. Click on Apply, close all windows.
14. Move this shortcut file into the folder you created on the desktop called “Web Setup No Phone”.

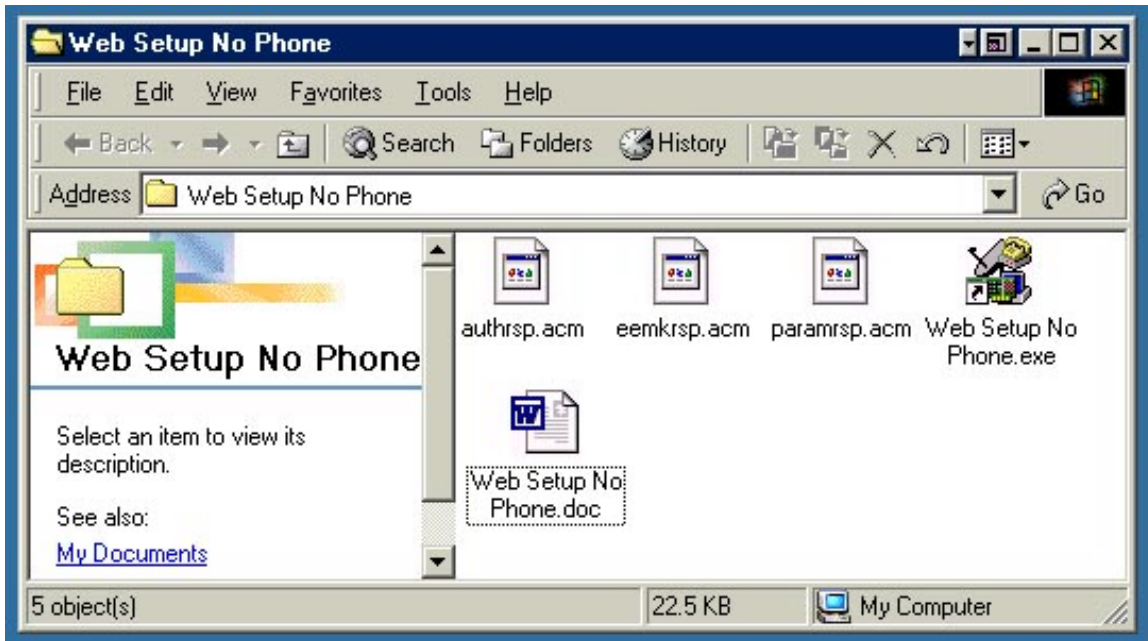

Above is what the folder should look like when your done.

THAT'S IT!

You may now perform a Web Setup anytime you like without a phone line by simply double-clicking on the new “Web Setup No Phone.exe” icon.

## **PERFORMING AN UNINSTALL - REINSTALL OF THE DIRECWAY SOFTWARE**

Okay... from time to time, you'll need to UNINSTALL and REINSTALL the Direcway Software for one reason or another. To avoid having to do a "Web Setup" with a phone line, you will need to copy over the three files you saved earlier.

### **STEPS**

1. Uninstall the Direcway Software.
2. Shutdown the computer and unplug the USB cable from the DirecWay modems.
3. Restart the computer and install the Direcway Software... Plug in the USB cable to the modems when the Installation software asks you to.
4. Copy the three files 1. authrsp.acm, 2. eemkrsp.acm, 3. paramrsp.acm from the "Web Setup No Phone" folder to the "BIN" folder inside the Direcway folder. (To get to the BIN folder, double-click on the "My Computer" icon on the desktop, then the "C" drive, then "Program Files", then "Direcway" then the "BIN" folder.
5. Close all open windows and open up the "Web Setup No Phone" folder.
6. Double click on the "Web Setup No Phone.exe" file to perform a Web Setup without a phone line.

That's it!... You're back online.

## **PERFORMING AN INSTALL ON A DIFFERENT COMPUTER**

If you have a second computer you would like to connect to the DirecWay modems, then follow these instructions to avoid needing a phone line when you run "Web Setup"

1. Copy the "Web Setup No Phone" folder to the other computer.
2. Keep the USB cable from the Direcway modems UNPLUGGED from the computer.
3. Install the Direcway Software on the new computer, and connect the USB cable to the modems when the installation software asks you to.
4. Copy the three files 1. authrsp.acm, 2. eemkrsp.acm, 3. paramrsp.acm from the "Web Setup No Phone" folder to the "BIN" folder inside the Direcway folder. (To get to the BIN folder, double-click on the "My Computer" icon on the desktop, then the "C" drive, then "Program Files", then "Direcway" then the "BIN" folder.
5. Close all open windows and open up the "Web Setup No Phone" folder.
6. Double click on the "Web Setup No Phone.exe" file to perform a Web Setup without a phone line.

That's it! Your other computer may now directly connect to the Direcway modems.